

Programming Remote Controls

Lighted DVR Remote

Easy remote set up

1. Manually turn the TV on.
2. Press the **TV** button.
3. Press and hold **SETUP** until the **TV** button blinks twice.
4. Press and release the **TV** button one time. The TV button stays lit for 10 seconds.
5. Find your device and brand from the cart below and note the **DIGIT** key assigned to your brand.
6. Press and hold down the DIGIT key for your brand while pointing the remote at the TV and let go of the key when your device turns **OFF**.
7. Setup for that device is complete.

<u>BRAND</u>	<u>DIGIT</u>
Insignia	1
LG	2
Panasonic	3
Phillips/Magnavox	4
Samsung	5
Sanyo	6
Sharp	7
Sony	8
Vizio	9
Westinghouse	0



Lighted DVR Remote

Turn on the TV and follow the steps below to search through all codes.

Be sure to point the remote at your TV during setup.

1. Press and hold SETUP until the LED blinks twice.
2. Press the TV POWER key.
3. Aim the remote at your TV and press and hold down the OK key.
4. Release the key when the TV turns off and setup is complete.



Big Button Remote

Auto search method for big button remote

1. Turn on the equipment that you want the remote control to operate (Cable Box or TV).
2. Press the **[DEVICE]** button simultaneously for 3 seconds. The device LED will turn on indicating that it is ready to be programmed. The LED will remain on for 30 seconds. The next step must be entered while the LED is on.
3. Press the **[CH ▲]** OR **[CH ▼]** button one at a time or keep it pressed. The remote will emit a series of Power ON/OFF code signals. Release the **[CH ▲]** OR **[CH ▼]** as soon as the equipment turns off.

**Note: You can verify that you have selected the correct code by pressing the [POWER] button. The equipment should turn back on. Then try all of the functions on the remote control (i.e. volume, mute, etc.) to ensure you have the correct code. If any of the functions do not operate as they should, repeat the instructions from STEP 3 above to continue the Auto search Method.*

3. Press the same **[DEVICE]** button to store the code. The Device LED will blink twice to confirm that the code has been stored.



Searching for your code

1. Your TV should be ON. Press the TV button one time.
2. Press and hold SETUP until the TV button blinks twice.
3. Enter numbers 9 9 1 on your remote number pad.
4. Press the channel up button slowly, repeatedly until your TV turns Off. (Stop pressing the channel up button as soon as the TV turns off).
5. Press and hold SETUP until the TV button blinks twice to lock in the code.